

Walker Tote - ©2012 Buckets Gone Wild (bucketsgonewild.com)


Cutting Instructions:

1 piece 15" x 44 - 45" of decorator or cotton fabric, a contrasting fabric and fusible fleece (optional)


1" Velcro - 2 sets 1" x 6" and 1 set 1" x 2"

Assembly

1. Fuse optional fleece to main fabric. With right sides together, sew main fabric and contrasting fabric with 1/2" seam, leaving an opening on one end for turning. Trim corners and turn. Press. Top stitch across both ends enclosing the opening on the open end. Mark Center.
2. Velcro—On wrong side sew 6" Velcro sets as shown below, 5" from the center.

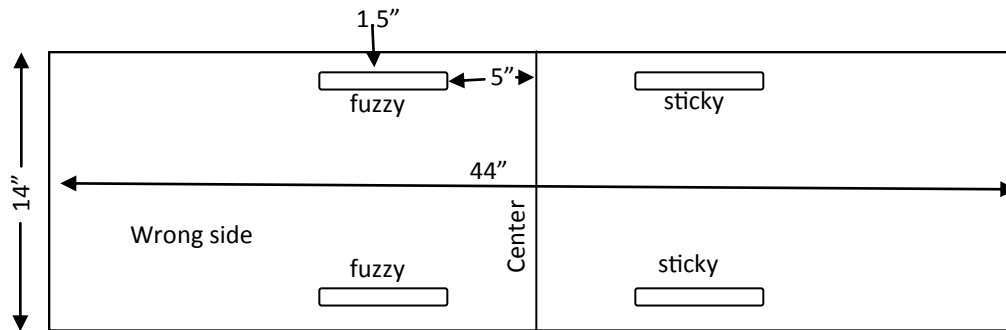

3. Pockets—On one side sew 1" x 2" pieces of Velcro as shown below. Then bring that topstitched end up to the broken line, 3" from the center. Pin sides. Bring other topstitched end up to the broken line, pin, and sew through center of the pocket, backstitching at the top.

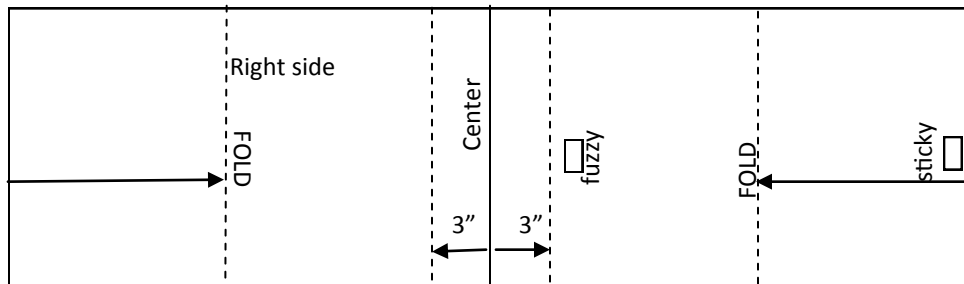

4. Top stitch around all 4 sides of the bag. You are finished!

